



Sprint

ZTE Warp Connect

Quick Start Guide



Welcome

Thank you for choosing Sprint.
We're here to help you get started
with Sprint and your new ZTE Warp
Connect.

ReadyNow – For expert help in
getting up and running with your new
hotspot, take advantage of exclusive
Ready Now resources at **sprint.com/
readynow**.

Visit **sprint.com/support** for ongoing
support and resources. There, you'll
find user guides, tutorials, and more
to help you get the most out of your
hotspot and Sprint service.


Get to know your hotspot

What's in the box

1. ZTE Warp Connect Mobile Hotspot
2. Quick Start Guide (This Guide)
3. AC Adapter
4. USB Cable
5. Important Information Booklet

Appearance

The following figure is for your reference only.

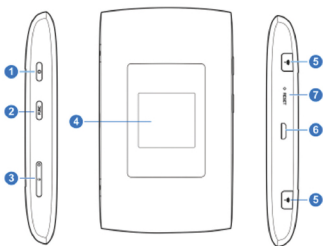


1. Power key
 2. Function (FUNC) key
- Note:** When the screen is off, press the FUNC key to turn on the screen. When the screen is on, press the FUNC key to access the options menu.
3. nano-SIM card slot
 4. LCD screen
 5. External antenna interface
 6. Charger/micro-USB port
 7. Reset button (internal)

Before you start

Charge the battery

1. Insert the USB cable into the charging adapter.
2. Insert the small end of the USB cable into the charger/USB port at the bottom of the device.
3. Plug the charging adapter into a standard AC power outlet.

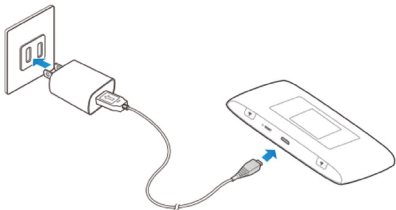

Get ready


1. Make sure you are in an area covered by the Sprint Mobile network (not roaming).
2. Make sure the device you are trying to connect to your ZTE Warp Connect has its Wi-Fi (wireless network connection) mode turned on.
3. Make sure your ZTE Warp Connect is set up on your Sprint account. (Sign on to your account at sprint.com/mysprint to verify.)

Power up your hotspot

Press and hold the Power key on top of the device to turn it on.



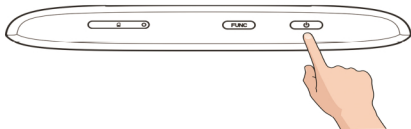


- The device will automatically activate.

Note: It can take several minutes for your device to connect with the Sprint network.



Indicator

When the hotspot is powered on, the following icons may be displayed on the LCD screen.

| Icon | Description |
|-----------------------------------------------------------------------------------|------------------------------------------------|
|  | Network signal strength |
| LTE | Network type |
|  | Roaming status. |
|  | Connected to the Internet |
|  | Wi-Fi status and the number of connected users |
|  | Battery level |

Connect to your hotspot


1. Turn on your ZTE Warp Connect and your Wi-Fi enabled device.
2. Open the Wi-Fi application or controls on the computer or Wi-Fi enabled device that you want to connect to your ZTE Warp Connect and find the Wi-Fi name 'SprintHotspot_xxx'.
3. When prompted, enter your Wi-Fi password.
4. Your Wi-Fi enabled device is now connected to the Internet.

Note: You can view the label on the device to get the default Wi-Fi SSID (name) and password.

Web interface

Manage, monitor, and customize your device settings by using the ZTE Warp Connect Web-based interface.

1. On a computer connected to the Internet via the ZTE Warp Connect, open a browser and type **http://myhotspot** or **http://192.168.128.1** into the address bar and press Enter. The ZTE Warp Connect home page opens.
2. Type your ZTE Warp Connect Interface password in the Password field and click **Login** to display the home page.

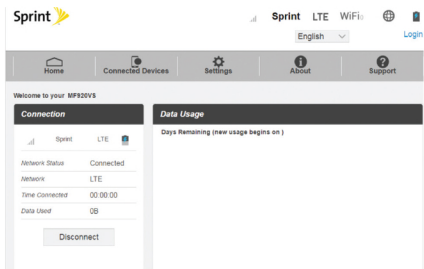

Note: The default password is **password**. It is recommended that you change the password as soon as possible.

Manage your account

Online: sprint.com/mysprint

- Make a payment, see your bills, enroll in online billing.
- Check data usage and account balance.
- See or modify the details of your service plan.
- Get detailed instructions and download content.

Online support and join the community

- For help with your phone, visit sprint.com/support.
- Visit community.sprint.com to join the discussion.

The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all devices. See sprint.com/coverage for more details.

For additional information about Sprint's Privacy Policy, visit sprint.com/legal/privacy.html.

To review the Terms and Conditions for your Sprint service, visit sprint.com/termsandconditions.

For important safety and regulatory information about your device model, visit the manufacturer's website.

©2017 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are property of their respective owners.