

JEXtream® RG3100 Reference Guide

Front



1. Navigation (Left)
2. Navigation ("Enter")
3. Navigation (Right)
4. SIM Card Slot
5. Power Button
6. USB-C Port
7. Ethernet Port

Back (cover opened)



Bottom



Sides

